

Cleaning Guide

DESIGNER ECO / ECO PLUS / ECO NIGHT SHUTTERS

To maintain the performance and appearance of your shutters, follow the care instructions below. Regular upkeep will ensure your shutters stay looking great and functioning properly for years to come.

General Care Tips

1. Regular Dust Removal

- Dust naturally accumulates over time.
- Use a soft damp cloth or brush to gently remove surface dust on a routine basis. This helps preserve the finish and prevents buildup.

2. Light Cleaning for Everyday Grime

- If tougher marks or stains are present, use a mild dishwashing liquid diluted in water using a soft cloth.
- Be sure to rinse with clean water and dry thoroughly to avoid moisture stains.

3. Safe Cleaning for Tough Stains

- For stubborn dirt or stains, use a mild, water-based household cleaner.
- Avoid harsh scrubbing or rough materials that can damage the surface.

4. Hardware Care in Coastal or Wet Areas

- In humid or coastal regions, hinges, magnets, and catch plates are more prone to corrosion.
- Clean these parts regularly to remove salt, moisture, or airborne contaminants that may cause pitting or rust.

5. Lubricate Moving Parts Properly

- Apply a food-grade silicone spray to all pivoting or moving parts to reduce friction and binding.

✗ **DO NOT use petroleum-based lubricants**, as they may degrade shutter components over time.



Cleaning Guide

DESIGNER ECO / ECO PLUS / ECO NIGHT SHUTTERS

To maintain the performance and appearance of your shutters, follow the important cautions below.

Important CAUTIONS

- ✗ Do not use harsh cloths or abrasive materials
- ✗ Avoid chlorine-based or ammonia-based cleaners
- ✗ Never apply strong chemical products

Please note:

Using these can affect the surface appearance and longevity and will void all warranties.

With regular care and the right cleaning practices, your Eco shutters will remain a beautiful and durable feature in your home for years to come.